

ABOUT US

Guangzhou Honda Trading Co., Ltd. is professional on developing and producing wall protection products, handicap grab bars, medical curtain, Tactile indicator, etc. We have the advanced technical team and skilled engineer team in factory as back up. Our service team had 6-year-experience on these products. We can offer the best quality, best price and best service. Our principle is promise is promise. Once we promise, we will do it.



CATALOG

ALL FOR YOU

YAJIE WALL COVERING	01
WALL PROTECTION SERIES	03
HANDRAIL(THR140)	05
HANDRAIL(THR159)	06
HANDRAIL(THR1433, THR89 & THR38)	08
CORNER GUARD	09
WALL GUARD	11
HANDICAP GRAB BAR SERIES	13
NYLON GRAB BAR	14
NON-BARRIER GANGWAY GRAB BAR	18
STAINLESS STEEL GRAB BAR	19
MEDICAL CURTAIN SERIES	23
TACTILE INDICATOR SERIES	25
INSTALLATION INSTRUCTION	27
COLOR OPTIONS	32

Yajie Wall Covering Professional INTERNATIONAL QUALITY

All for you

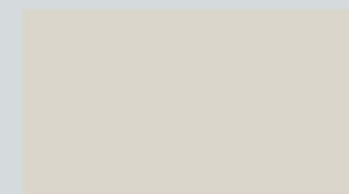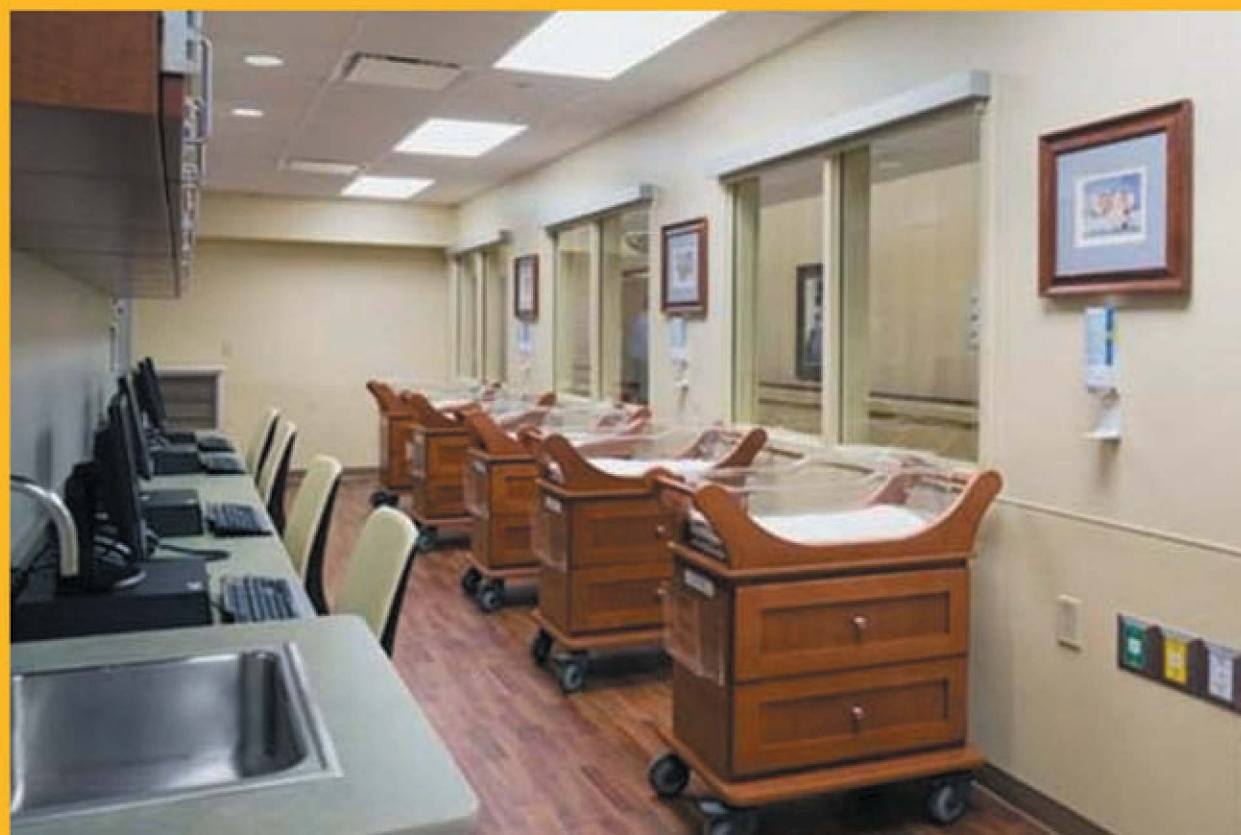

YAJIE WALL COVERING

- 1.Yajie Wall Covering is perfect for trouble spots that endure commercial damage , offering high impact resistance. It is durable & easy to clean.
- 2.Yajie Wall Covering is used at wainscot height or full wall height, can protect your walls, doors and cabinetry in any facility and any application.
- 3.Yajie Wall Covering protects in a broad range of uses, from corridor wainscot and patient room walls, to back-of-house areas and slop sink backsplashes. Or it can simply be used as a finishing touch to complete a unified presentation in wall protection system designs.
- 4.All while providing added texture and color to whatever design scheme you choose. Available in 20 standard colors, and any custom color you can dream of, Yajie wall covering has the versatility to serve your needs.
- 5.Accessories are including top cap, join strip, cuve former and outside corner.




TKP-15 (Thickness: 1.5mm)

TKP-20 (Thickness: 2.0mm)


TKP-30 (Thickness: 3.0mm)

Standard Size:1.22x2.44m, and we can make as your request.
Available thickness:0.8~10mm.


Yajie Wall Covering Accessories

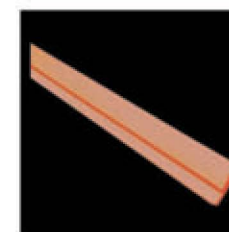


TKP-01
Top Cap

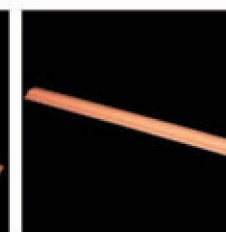

TKP-02
Joint Strip

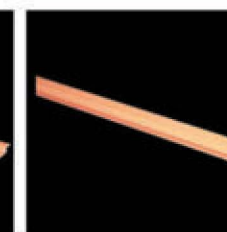

TKP-03
Curve Former

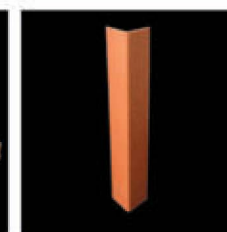

TCG-37
Outside Corner

Wall Protection Series Professional 02


INTERNATIONAL QUALITY

All for you

Handrails

1. Hongtai handrails offer a wide variety of styles and colors for all types of facilities, applications, and budgets.
2. Handrails can provide protection to the wall and support for users. It is antibacterial, fire resistant, safeguarding, and easily cleaned. It is widely used in hospital, Welfare Centre, hotel and other public place. Hongtai Handrails can match with Hongtai Wall Guards, Corner Guards & Yajie wall covering to create a perfect space.
3. 20 standard colors, and custom color matching - allow for an incredible wealth of design possibilities.



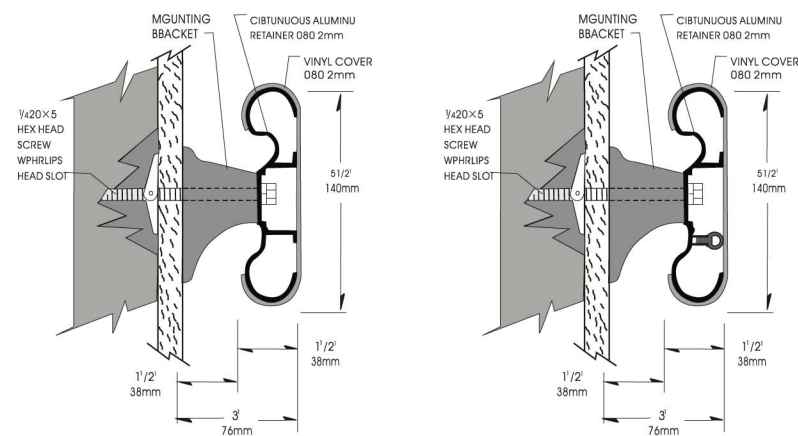

结构 A

结构 B

THR140 Series

1. Hongtai Handrails installed on the wall which is about 90cm~100cm from floor. It is easy installation, clean up and maintenance.
2. 140mm width x 38mm gripping diameter, extend 76mm from the wall, 5m length.
3. Product Parts: 2mm PVC Cover, 1.8mm Aluminium Retainer, ABS Elbow Piece, Inside Corner, Outside Corner, Bracket, etc.
4. All mounting fasteners are included with order.



THR1401

PVC & Aluminium Handrail
in Single color



THR1403

PVC & Aluminium Handrail
with 60mm color strip



THR1401W

PVC & Aluminium Handrail
in Single wood color




THR1403W

PVC & Aluminium Handrail
with 60mm wood color strip

HR159 Series

1. Hongtai Handrails installed on the wall which is about 90cm~100cm from floor. It is easy installation, clean up and maintenance.
2. 159mm width x 38mm gripping diameter, extend 76mm from the wall, 5m length.
3. Product Parts: 2mm PVC Cover, 1.8mm Aluminium Retainer, ABS Elbow Piece, Bracket, etc.
4. All mounting fasteners are included with order.

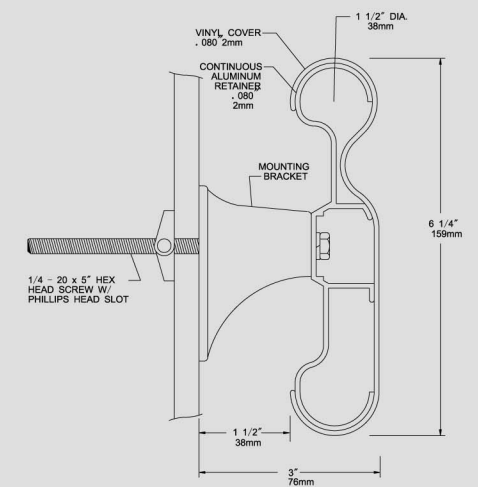



THR1591
PVC & Aluminium Handrail
in Single color



THR1593
PVC & Aluminium Handrail
with different color grip




THR1593W
PVC & Aluminium Handrail
with different wood color grip



THR1595W
PVC & Aluminium Handrail
with different wood color cuve and bumper



THR1592
PVC & Aluminium Handrail
with different color curve

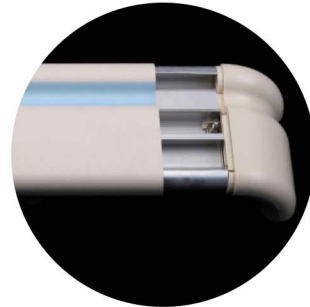

THR1591W
PVC & Aluminium Handrail
in Single wood color





THR1594W
PVC & Aluminium Handrail
with different wood color bumper

THR143, THR89, THR38Series


1. Hongtai Handrails installed on the wall which is about 90cm~100cm from floor. It is easy installation, clean up and maintenance.
2. 38mm gripping diameter, extend 76mm from the wall, 5m length.
3. Product Parts: 2mm PVC Cover, 1.8mm Aluminium Retainer, ABS Elbow Piece, Bracket, etc.
4. All mounting fasteners are included with order.





THR1433
PVC & Aluminum mini handrail
with different color grip,
width: 143mm

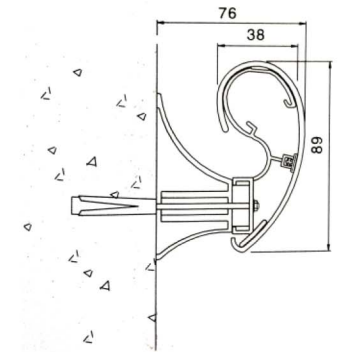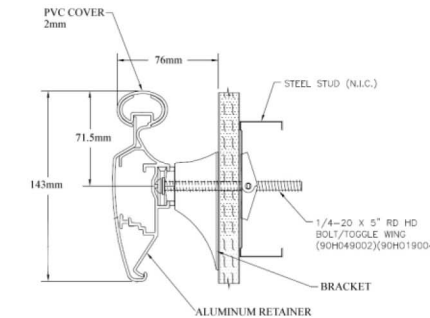

THR89
PVC & Aluminium Mini Handrail
in Single color,
width: 89mm

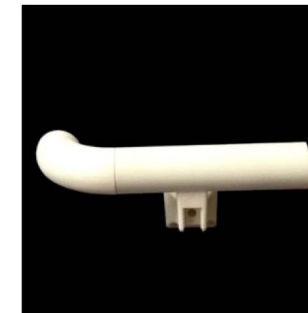

THR38
PVC & Aluminium Mini Handrail
in Single color,
Diameter: 38mm

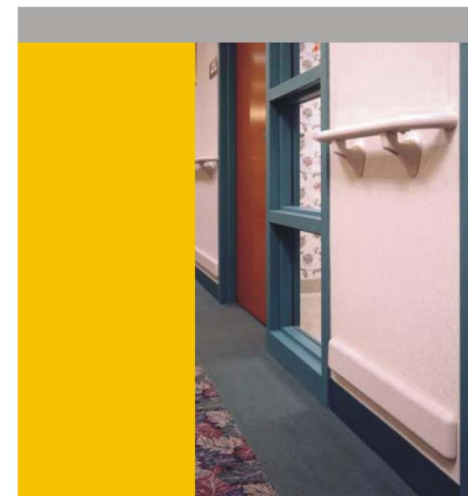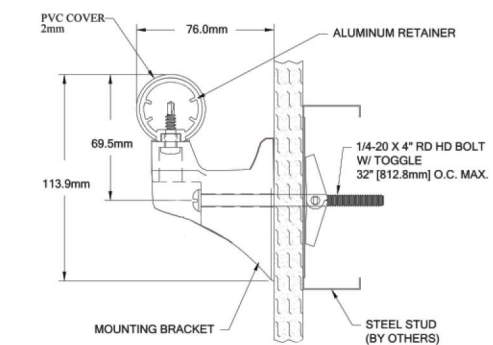


Corner Guard

- 1.Hongtai corner guards are suitable options for protecting every type of facility and every application. Whether for a healthcare, educational, municipal or commercial building, you can rely on Hontai corner guards to protect your building.
- 2. Hongtai Corner Guards installed on the turning of wall to protect it from impact. Recommended Height are 1.2m, 1.5m, 2m, 3m.
- 3. Hongtai corner guards are fireproof, antibacterial, easy to install and maintenance. Available in 20colors for perfect coordination with the the other impact protection products.
- 4. Product parts:2mm PVC Cover, 1.3mm Aluminium Retainer, ABS End cap, etc. All mounting fasteners are included with order.




TCG512
PVC & Aluminum Corner Guards,
Width:51 cm x 51 cm,
135 degree

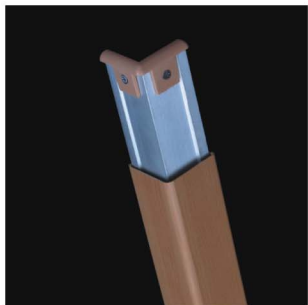

TCG511W
PVC & Aluminum Corner Guards
in wood color,
Width:51 cm x 51 cm, 90 degree




TCG512W
PVC & Aluminum Corner Guards
in wood color,
Width:51 cm x 51 cm, 135 degree

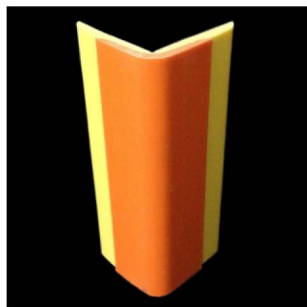

TCGR50
Rubber Corner Guards,
Thickness:7mm, Width:50cm x 50cm,
90 degree



TCG511
PVC & Aluminum Corner Guard
Width:51 cm x 51 cm,
90 degree

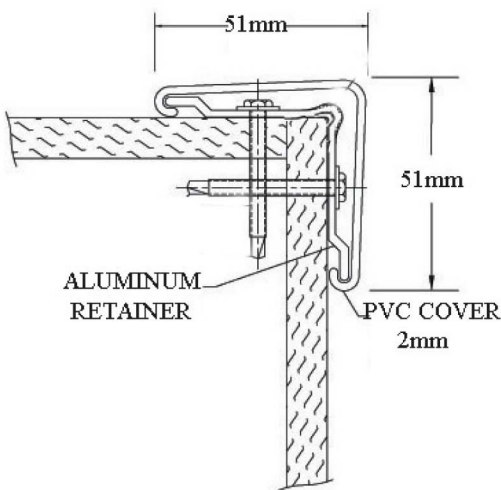


TCG37

PVC Corner Guards,
Width:37cm x 37cm, 90 degree



TCG37W

PVC Corner Guards in wood color,
Width:37cm x 37cm, 90 degree

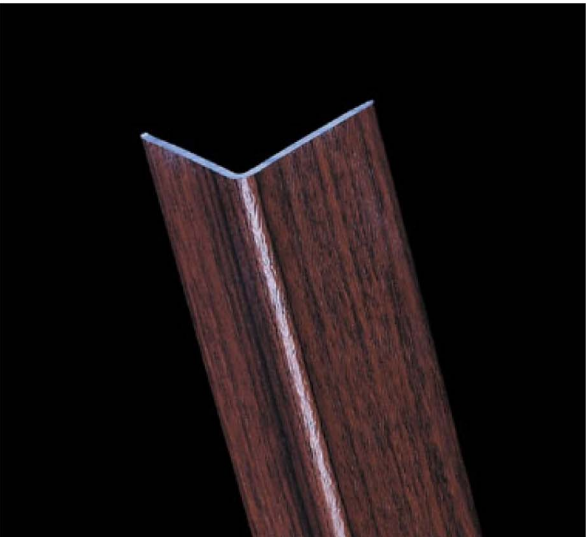

TCG76

PVC & Aluminum Corner Guards,
Width:76cm x 76cm, 90 degree


TCG76W

PVC & Aluminum Corner Guards in wood color,
Width:76cm x 76cm, 90 degree



Wall Guard

1. Hongtai Wall Guards are versatile and durable, giving a natural, congruous feel when combined with the Hongtai handrails, corner guards and Yajie Wall Covering.
 2. Hongtai Wall Guards installed on the wall which is about 10cm~15cm or 90cm~100cm from floor,protecting the wall from impact.
 3. Hongtai Wall guards are fireproof, antibacterial, easy to install and maintenance.
- Available in 20 colors for perfect coordination with the the other wall protection products.
4. Product parts:2mm PVC Cover, 1.8mm Aluminium Retainer, ABS End cap, etc. All mounting fasteners are included with order.

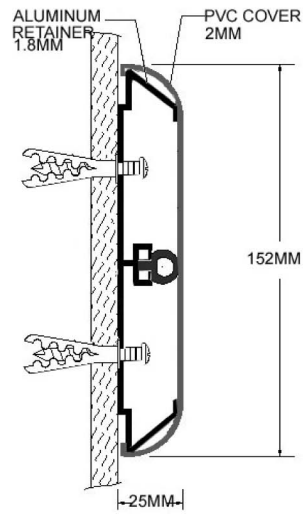

TWG1521
PVC & Aluminum Wall Guards
in single color,
Width:152mm



TWG1522
PVC & Aluminum Wall Guards
with 60mm width color strip,
Width:152mm

TWG102W

PVC & Aluminum Wall Guards
in single wood color,
Width:102mm



TWG1521W

PVC & Aluminum Wall Guards
in single wood color,
Width:152mm



TWG1522W

PVC & Aluminum Wall Guards
with 60mm width wood color strip,
Width:152mm




TWG200W


PVC & Aluminum Wall Guards
in single wood color,
Width:197mm



TWG200
PVC & Aluminum Wall Guards
in single color, Width:197mm

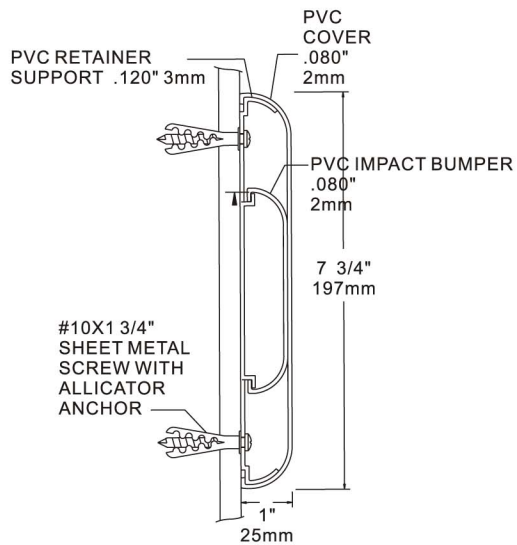

TWG102
PVC & Aluminum Wall Guards
in single color, Width:102mm

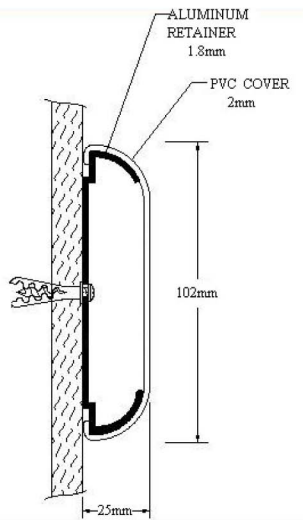

Handicap Grab Bar Series

Professional 03

INTERNATIONAL QUALITY

All for you



Nylon garb bar

Grab bars are safety devices designed to enable people to maintain balance, lessen fatigue while standing, hold some of their weight while maneuvering, or have something to grab onto in case of a slip or fall. Although they are most commonly seen in public handicapped toilet stalls, grab bars are also used in private homes, assisted living facilities. Grab bars are installed next to a toilet or in a shower or bath enclosure. Soft Nylon exterior gives a sense of warmth and a non-slip surface! Nylon grab bar can kill surface bacteria in 24 hours. Double-aluminum (or 304 Stainless Steel) tube inside offering a closed & corrosion resistance structure.



TGB001D

Straight Nylon Grab Bar with skidproof surface.

1. Material: Nylon & Aluminum / 304 Stainless Steel.
2. Dia. Of Nylon is 35mm.
3. Standard Length is 300mm, 450mm, 600mm, 750mm, and we can make the length as your request.



TGB005

Nylon Wall support Grab Bar.

1. Material: Nylon & Aluminum / 304 Stainless Steel.
2. Dia. Of Nylon is 35mm.
3. Length is 600mm and we can make the length as your request.
304 Stainless Steel plate size is 200mm x 115mm.



TGB008

Nylon lavabo Grab Bar.

1. Material: Nylon & Aluminum / 304 Stainless Steel.
2. Dia. Of Nylon is 35mm.
3. Length is 600mm and we can make the length as your request.



TGB010

Nylon Male Urinary Grab Bar.

1. Material: Nylon & Aluminum / 304 Stainless Steel.
2. Dia. Of Nylon is 35mm.
3. Length is 600mm and we can make the length as your request.



TGB002

Nylon Grab Bar in "L" shape.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Height is 720mm, Width is 500mm and we can make the length as your request.

TGB007

Nylon Lift-up support Grab Bar.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Length is 600mm and we can make the length as your request.
304 Stainless Steel plate size is 200mm x 115mm.

TGB011

Nylon Floor-to-Wall support Grab Bar.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Height is 750mm, Width is 700mm, and we can make the length as your request.

TGB004

Nylon Grab Bar in 135 degree "L" shape.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Both of Height & Width is 450mm and we can make the length as your request.

TGB015

Nylon Floor-to-Wall Male Urinary Grab Bar.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Heigh is 1100mm, Width is 600mm and we can make the length as your request.



TGB018

Nylon Lift-up Shower Seat.

- 1.Material: Nylon & 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Length is 465mm, Height is 325mm, Width is 510mm, and we can make the length as your request.

TGB020

Nylon Lift-up Shower Seat.

- 1.Material: Nylon & 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Length is 405mm, Width is 320mm, and we can make the length as your request.

TGB012

Nylon Bath Grab Bar.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Length is 1000mm, Height is 680mm, and we can make the length as your request.

TGB014

Nylon Floor-to-Wall Lavabo Grab Bar.
















- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Width is 600mm, Height is 750mm, and we can make the length as your request.

TGB017

Nylon Corner Grab Bar.

- 1.Material: Nylon & Aluminum / 304 Stainless Steel.
- 2.Dia. Of Nylon is 35mm.
- 3.Both of Height & Width is 780mm and we can make the length as your request.

Nylon Grab Bar Structure

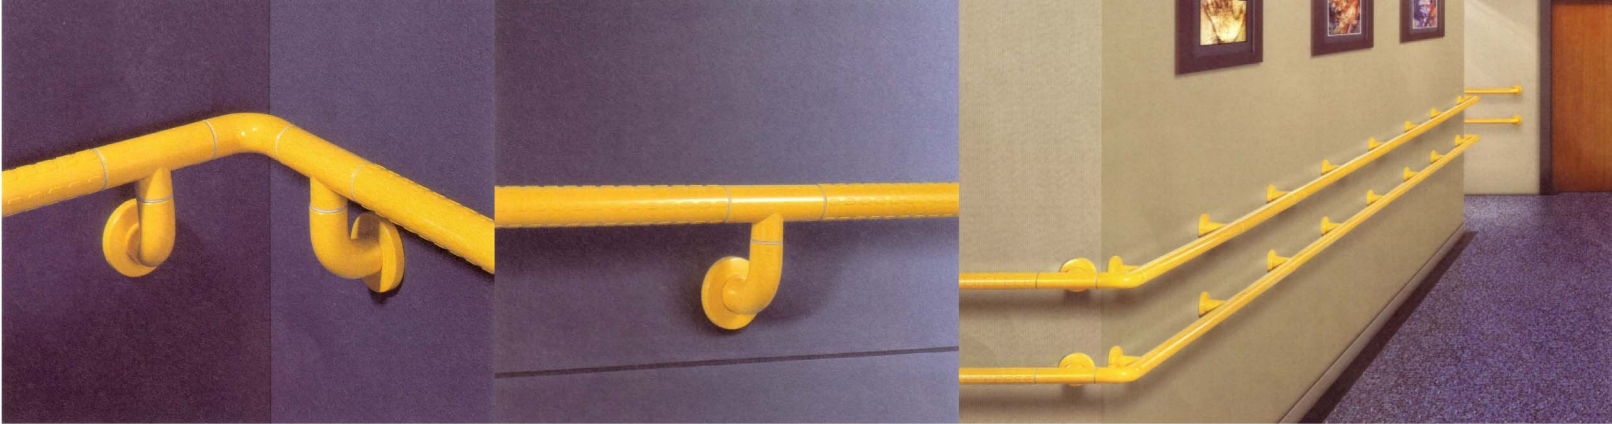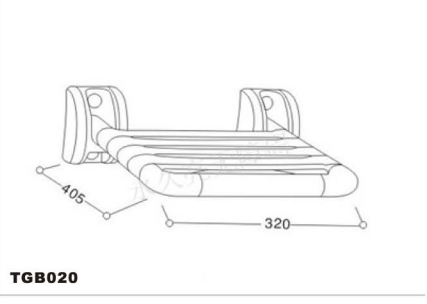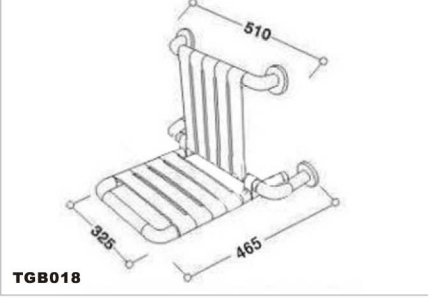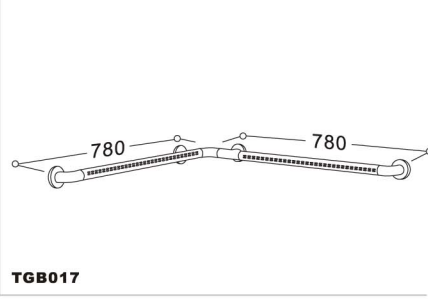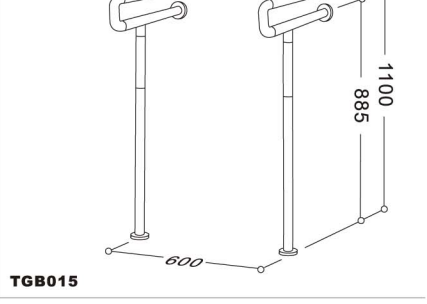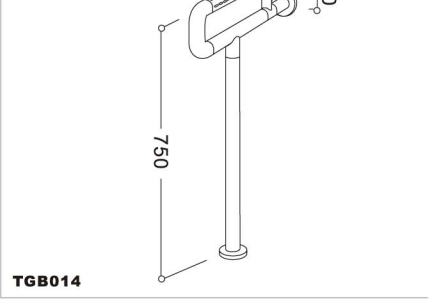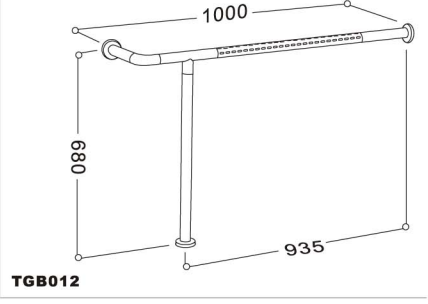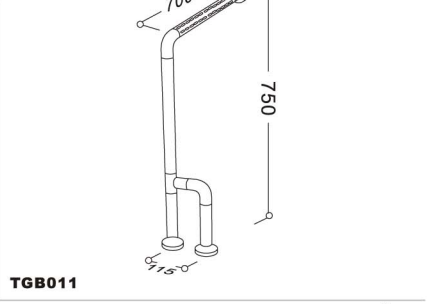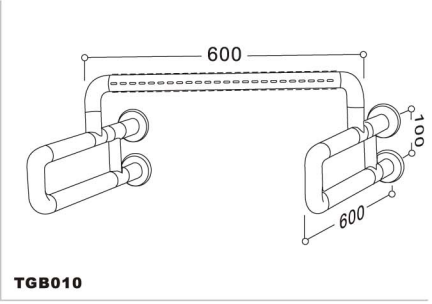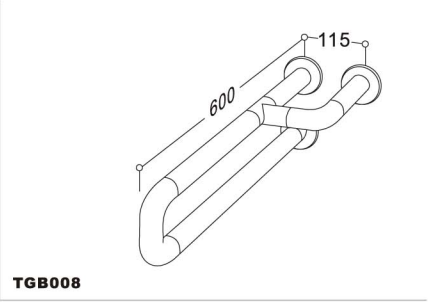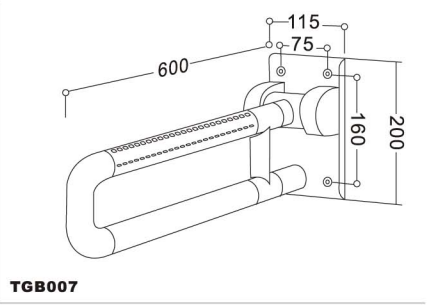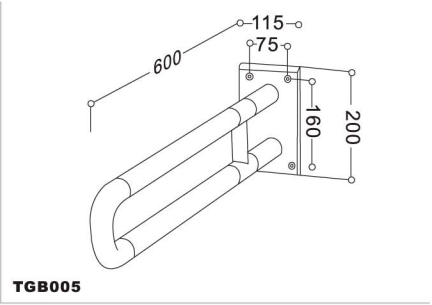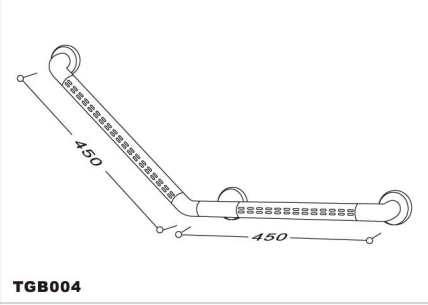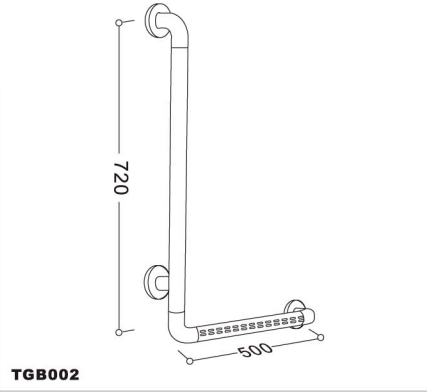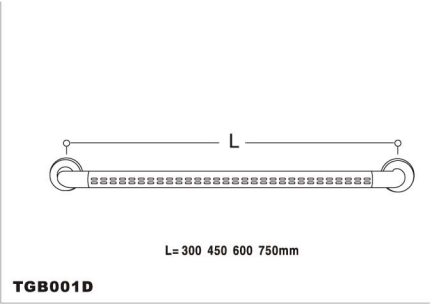

Non-barrier Gangway Series

The nylon safety grab bar series is perfect for the construction of non-barrier gangways. It's real advantage to compare with other handgrips. The upper layer is suitable for walkers and those on crutches, whilst the lower layer is set at the correct height for children and people in wheelchair. It can match some humanization design.



Stainless steel safety garb bar


Grab bars are safety devices designed to enable people to maintain balance, lessen fatigue while standing, hold some of their weight while maneuvering, or have something to grab onto in case of a slip or fall. Although they are most commonly seen in public handicapped toilet stalls, grab bars are also used in private homes, assisted living facilities. Grab bars are installed next to a toilet or in a shower or bath enclosure.



SGB001


Straight stainless steel Grab Bar
1. Dia. of Stainless Steel is 32mm.
2. Finish: Satin, Matt, Skidproof.

A	406	457	610	762	813	914	1067	1219	1320
B	454	505	658	810	861	962	1115	1267	1368

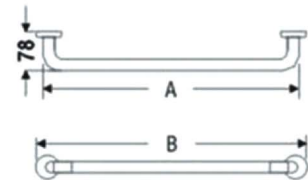



SGB011

Stainless steel Floor-to-Wall support Grab Bar.
1. Dia. of Stainless Steel is 32mm.
2. Finish: Satin, Matt, Skidproof.

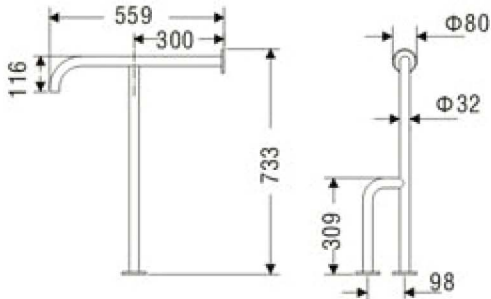


SGB017



Stainless steel Corner Grab Bar.
1. Dia. of Stainless Steel is 32mm.
2. Finish: Satin, Matt, Skidproof.

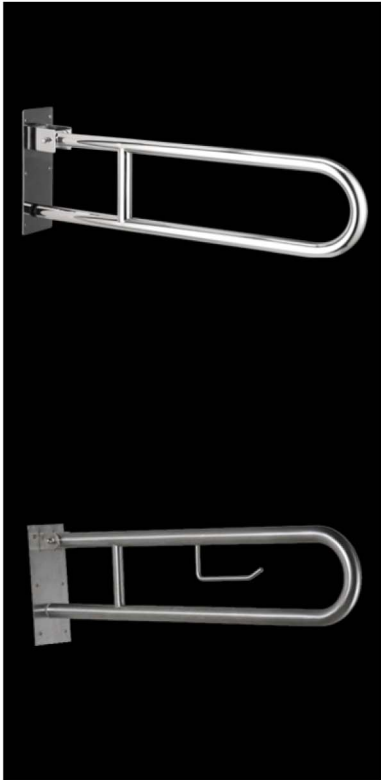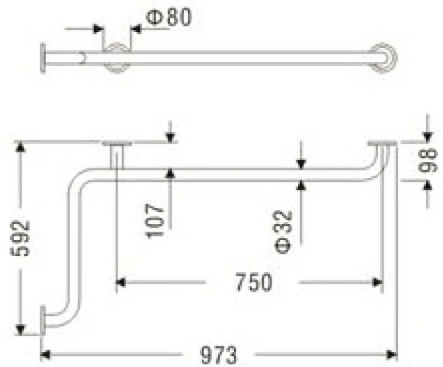

SGB007


Stainless steel Lift-up support Grab Bar.
1. Dia. of Stainless Steel is 32mm.
2. Finish: Satin, Matt, Skidproof.
3. The length of SGB007 with paper hanger is 750mm.

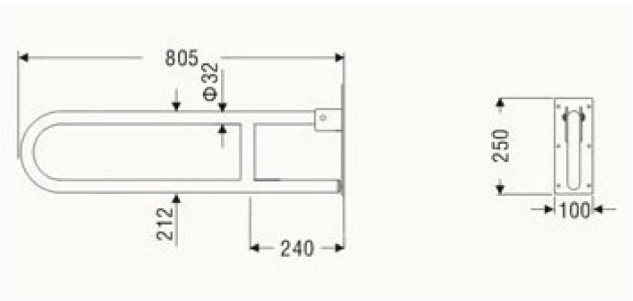

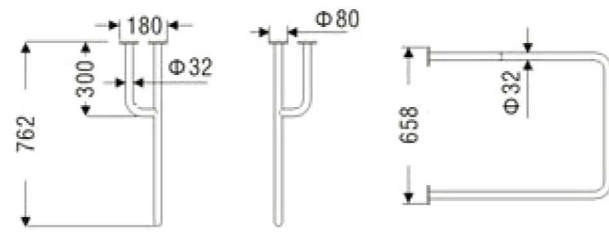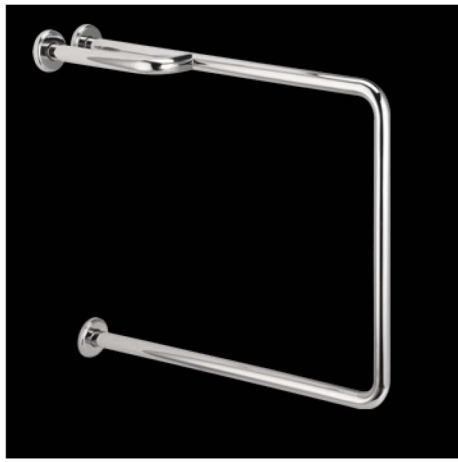



SGB013

Multi-function stainless steel Grab Bar.
1.Dia. of Stainless Steel is 32mm.
2.Finish: Satin, Matt, Skidproof.

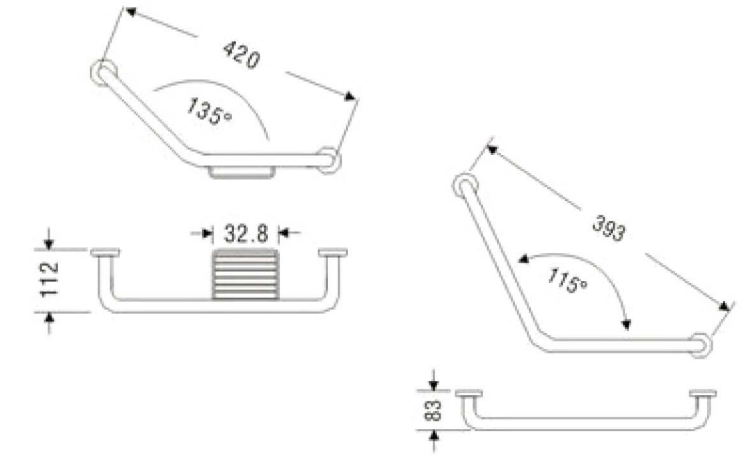



SGB004

Stainless steel Grab Bar in 135 degree "L" shape.
1.Dia. Of Stainless Stee is 32mm, for SGB004 with soap dish, the dia. is 25mm.
2.Finish: Satin, Matt, Skidproof.

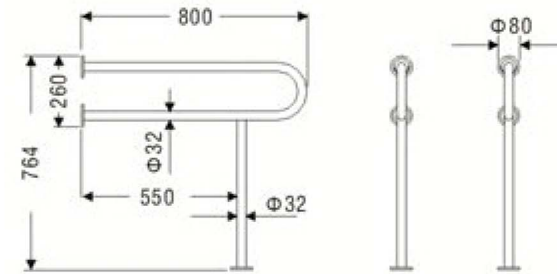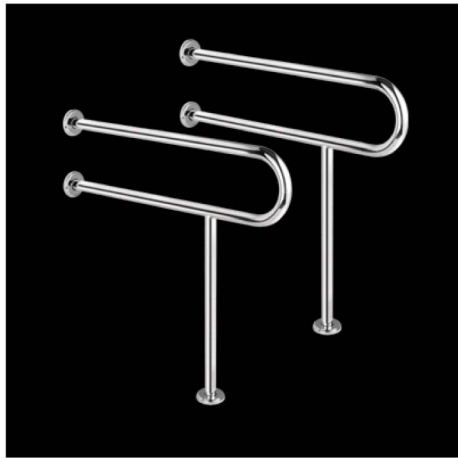



SGB014

Stainless steel Floor-to-Wall Lavabo Grab Bar.
1.Dia. of Stainless Steel is 32mm.
2.Finish: Satin, Matt, Skidproof.

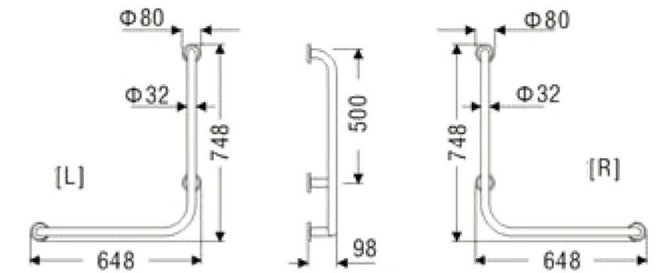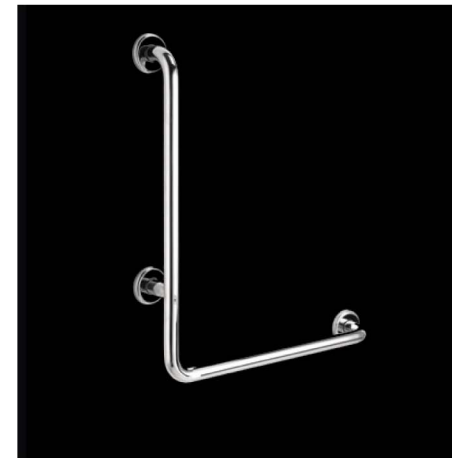


SGB002(L,R)

Stainless steel Grab Bar in "L" shape.
1.Dia. of Stainless Steel is 32mm.
2.Finish: Satin, Matt, Skidproof.

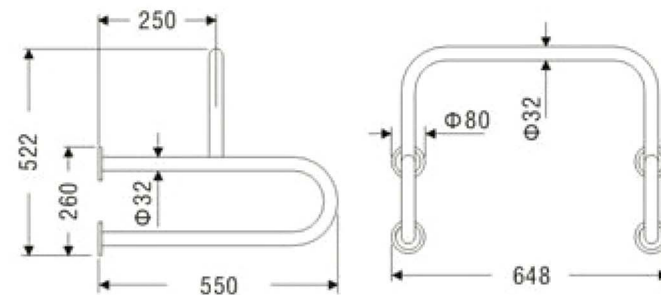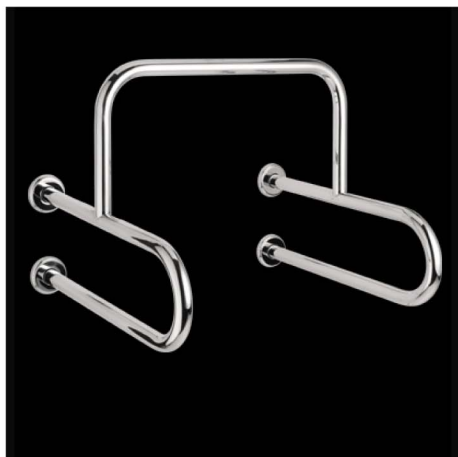

SGB010

Stainless steel Male Urinary Grab Bar.
1.Dia. of Stainless Steel is 32mm.
2.Finish: Satin, Matt, Skidproof.

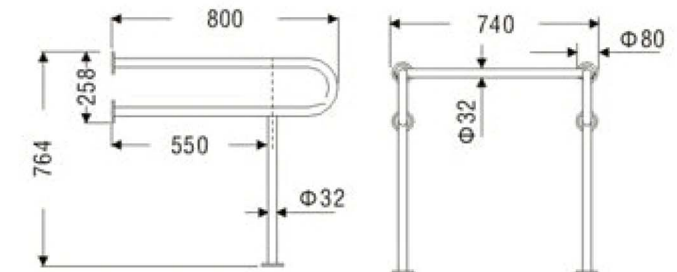

SGB015

Stainless steel Floor-to-Wall Male Urinary Grab Bar.
1.Dia. of Stainless Steel is 32mm.
2.Finish: Satin, Matt, Skidproof.

Medical Curtain Series 04


Professional

INTERNATIONAL QUALITY

All for you


Medical Curtain

1. Medical curtains are used as privacy curtains for patients in hospitals and also provide privacy in clinics, nursing homes, educational and other facility environments.
2. Medical Curtain is with web design on the top. Air from outside or air conditioner can go through the web design to keep the sickrooms ventilated.
3. Material: 100% Polyester, Weight: 200g/m² - 250g/m²
4. 1 meter of track should be with 1.5m of curtain.

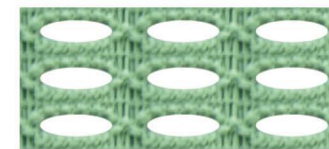


MC01

Medical Curtain
with oval web design on the top,
2.8m height, 9 colors for option.

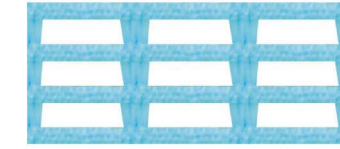

MC02

Medical Curtain
with square web design on the top,
2.8m height, 9 colors for option.

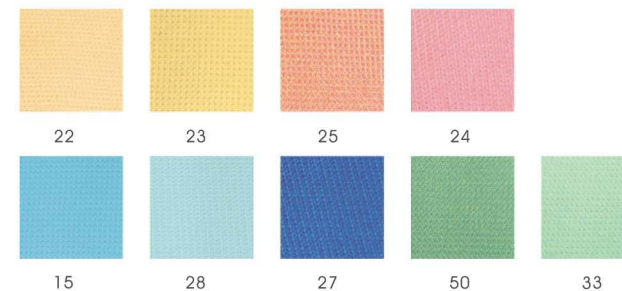

9 colors for option



MC03

Aluminum track
in "I" shape for medical curtain,
6m/pc



Tactile Indicator Series Professional 05


INTERNATIONAL QUALITY

All for you




Tactile Indicator series

1. Tactile Indicator is to provide a tactile surface on public pathways & access routes that can be felt underfoot and recognised as a warning of impending pedestrian hazard, particularly to the vision impaired, but also as an added safety precaution to all pedestrians.
2. Tactile Indicators are required to be installed to an approaching hazard or change of direction along a path of travel, such as a footpath, passageway, walkway, ramp, stairs or landing.
3. Material: Stainless Steel.
4. Purpose location: Airport, Railway Station, Public Walk Way, Mall, etc.

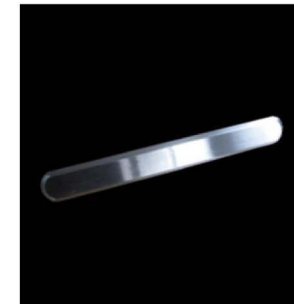

TTI01

304 Stainless Steel Tactile Strip Indicator.
Max. Dia.:35mm, Length: 280mm,
Thickness: 5mm, Surface Design: Flat.

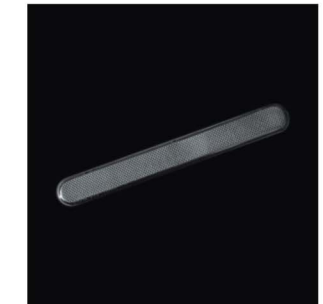

TTI02

304 Stainless Steel Tactile Strip Indicator.
Max. Dia.:35mm, Length: 280mm,
Thickness: 5mm,
Surface Design: Skidproof diamond design.




TTS04

304 Stainless Steel Tactile Stud Indicator.
Max. Dia.:35mm, Thickness: 5mm,
Surface Design: Skidproof diamond design.



TTS01

304 Stainless Steel Tactile Stud Indicator.
Max. Dia.:35mm, Thickness: 5mm,
Surface Design: Flat.

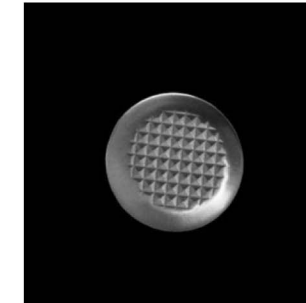

TTS02

304 Stainless Steel Tactile Stud Indicator.
Max. Dia.:35mm, Thickness: 5mm,
Surface Design: Skidproof diamond design.



TTS03

304 Stainless Steel Tactile Stud Indicator.
Max. Dia.:35mm, Thickness: 5mm,
Surface Design: Skidproof circle design.

Installation Instruction

Professional 06


INTERNATIONAL

QUALITY

All for you

Installation Instructions


FIG. 1

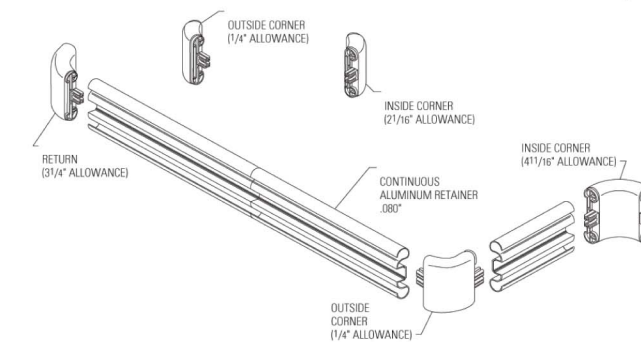


Please read all instructions before installing handrail.

1. Cut aluminum retainer to desired length, leaving allowance for returns, outside corners and inside corners. See Figure 1.

FIG. 2

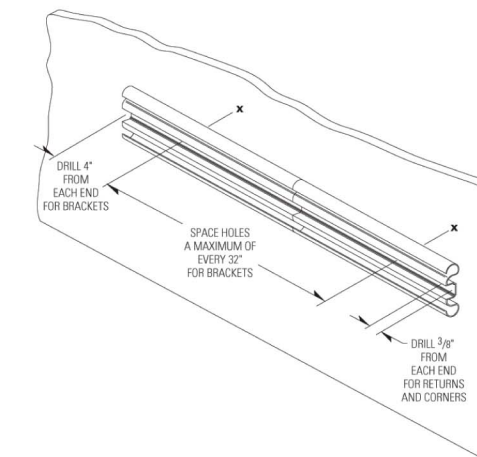


2. Drill holes in centerline of aluminum retainer for brackets, returns and corners using 1/4\" drill bit. Position aluminum retainer against wall at desired height allowing for returns and corners. Level and mark bracket holes on wall. Drill marked holes with 3/4\" drill bit for toggle bolts (drywall installation) or 1/2\" drill bit for lead anchor (concrete wall installation). See Figure 2.

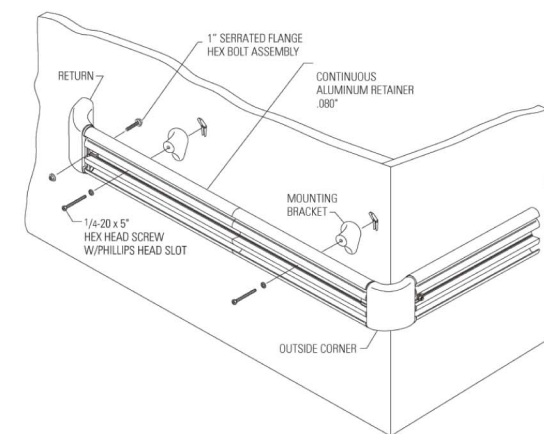

3. Attach returns and corners to retainer leaving a 1/16\" gap between returns/corners and retainer to allow for adjustment. Loosely attach brackets to retainer. Mount on wall, level retainer and tighten screws to secure. See Figure 3.


FIG. 4

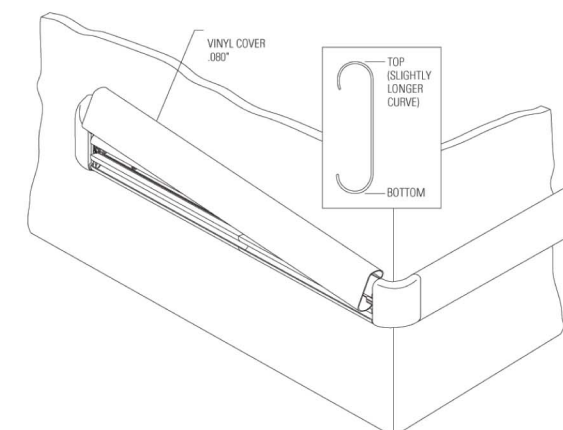

4. Cut vinyl cover to length between returns and/or corners. (Note: Distinct top and bottom for cover. Trim factory edges square before installation). Position cover on retainer and adjust returns and/or corners for a tight fit. Snap cover on retainer by starting at top and pivoting over the bottom of retainer. See Figure 4.


Note: For 855 Vinyl Only - When continuous runs are over 12', vinyl covers should be installed in consecutive order using the numbers found on the back of vinyl covers. This ensures proper alignment of accent strip.

Installation Instruction of Corner Guard


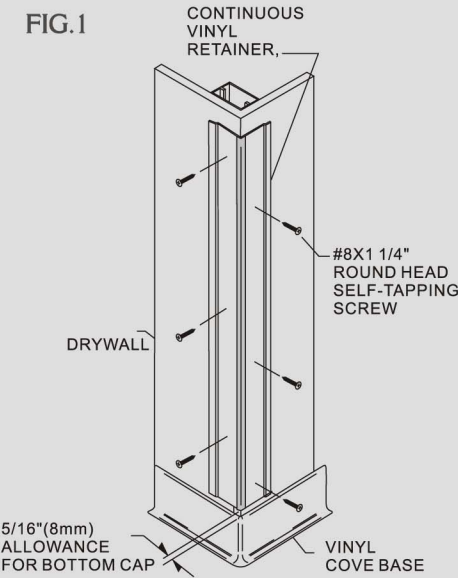


Please read all instructions before installing corner guards. Material must be stored, installed and used in environmentally controlled conditions.

1. Position vinyl retainer against wall, leaving allowance for bottom cap, secure retainer to the wall by staggering fasteners on each wing of the retainer, see Figure 1.

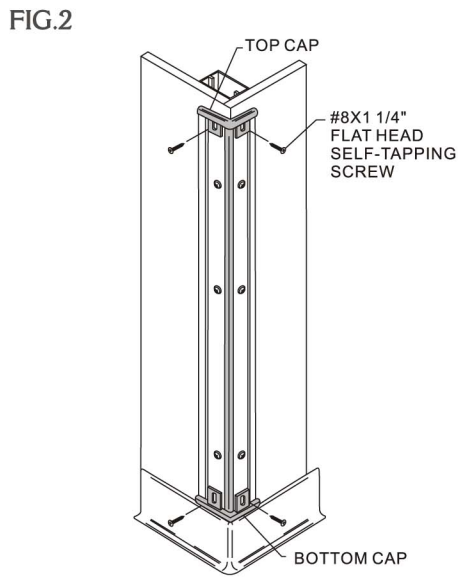


2. Overlap the retainer with the mounting tabs of the top and bottom caps and attach them to retainer. Stagger the fasteners on each wing of the cap. See Figure 2. When installing flexible top caps on custom angle corner guards, use cup washers and flat head screws to fasten the top caps to the retainer, See Figure 2a.

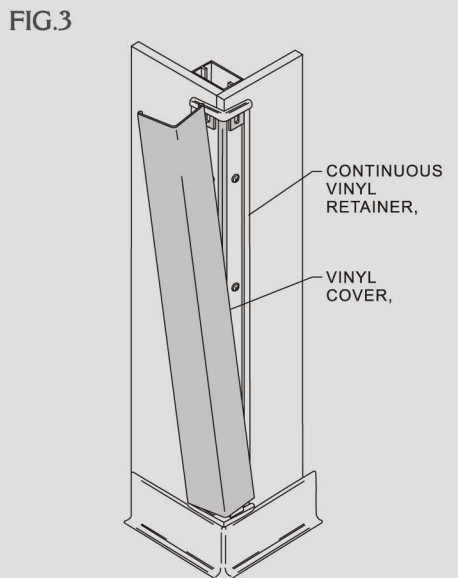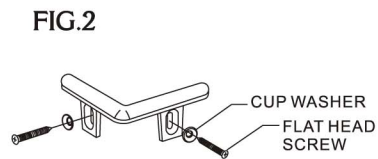

3. Position cover on retainer and adjust the top cap for a tight fit. Starting at the top, push cover onto retainer pressing over the entire length until it snaps into place. See Figure 3.


FIG.1

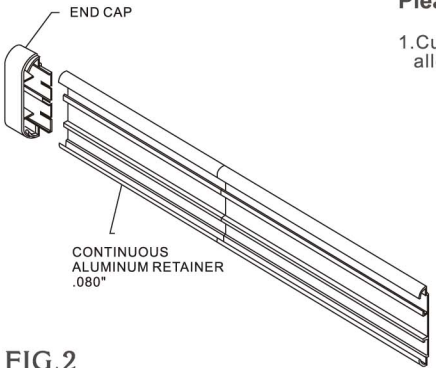

Please read all instructions before installing wall guard.


1. Cut aluminum retainer to desired length, leaving allowance for end caps, See Figure 1.

FIG.2

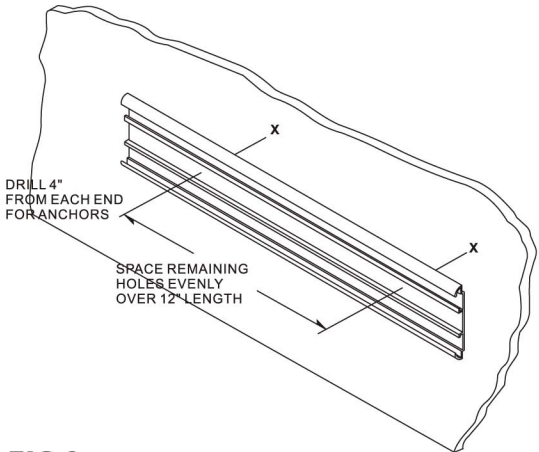


2. Drill holes in centerline of retainer using 1/4 inch drill bit. Position retainer on wall allowing for end caps/corners. Level and mark holes. See Figure 2. NOTE: For concrete or brick wall installation, drill 1/4 inch holes, 3/8 inch from each end of retainer for end caps/corners.

FIG.3

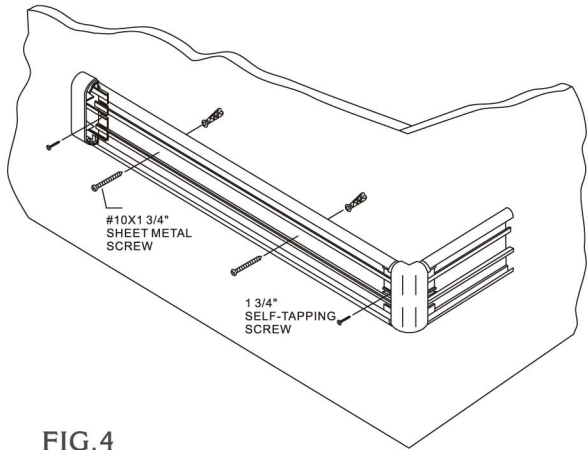

3. Drill marked holes on wall using a 1/4 inch drill bit and position Alligator anchors into holes. Mount retainer on wall and tighten screws to secure. Slide end caps and corners onto the retainer and secure, leaving a 1/16 inch gap between returns/corners and retainer to allow for adjustment. See Figure 3.




FIG.4

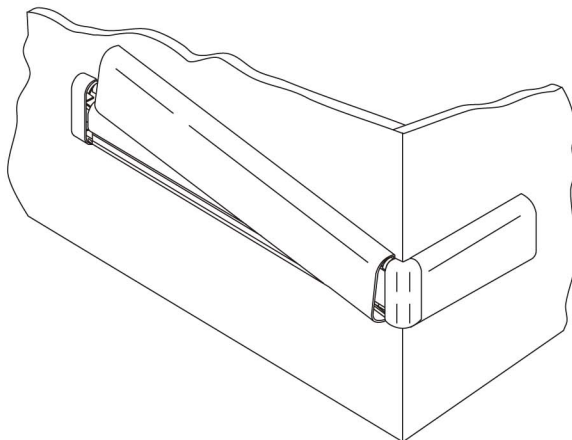

4. Cut the impact bumper to the length between the inside edge of the end caps/corners. Position and snap bumper in place. Cut the cover to length between end caps and/or corners. (Note: Trim factory edges square before installation). Position cover on retainer and adjust returns and/or corners for a tight fit. Push cover over the retainer until it snaps into place. See Figure 4.

Yajie Wall Covering Installation

1. Substrate must be dry, well sealed and free of dirt, loose paint, wax and grease. Glossy surfaces may require sanding or priming to help promote adhesion
2. Top caps, Joint Strips and Curve Strips need to be slid on the sheet before applying adhesives.
3. Position Yajie Wall Covering on wall. When a butt joint is used, leave a 1/16" gap between sheet to allow for expansion.
4. After Yajie Wall Covering is on the wall, apply heavy body pressure to the sheet with extension roller.

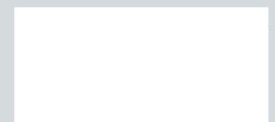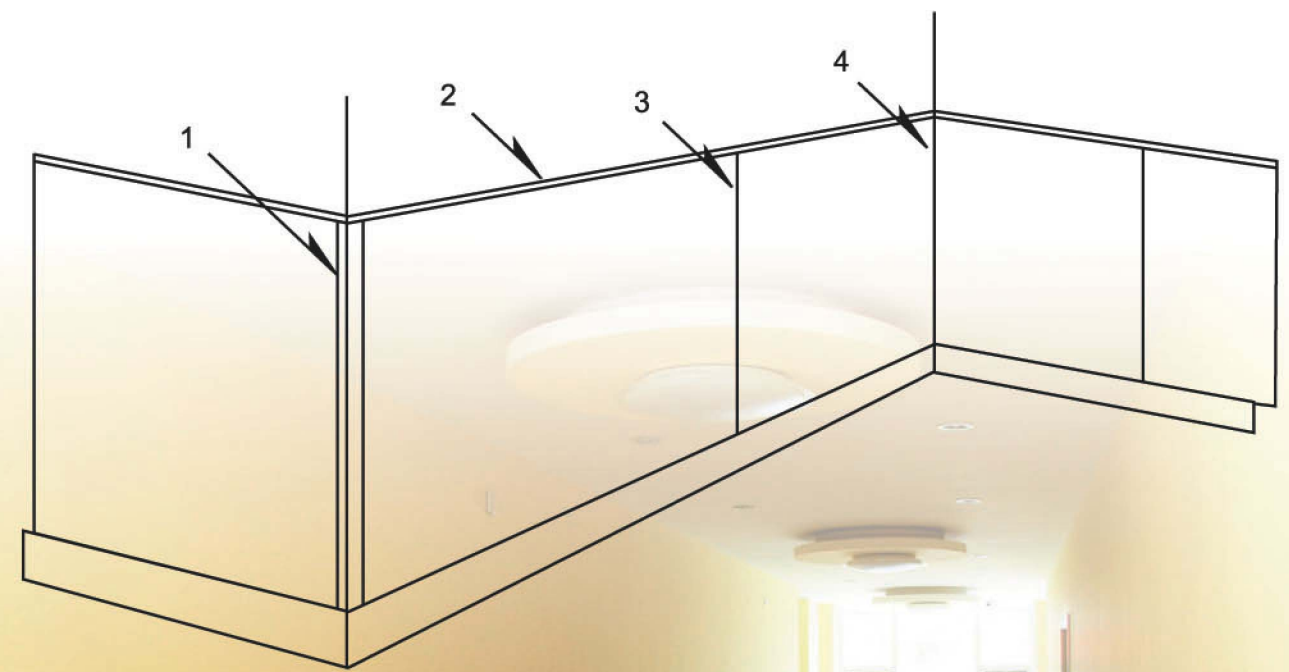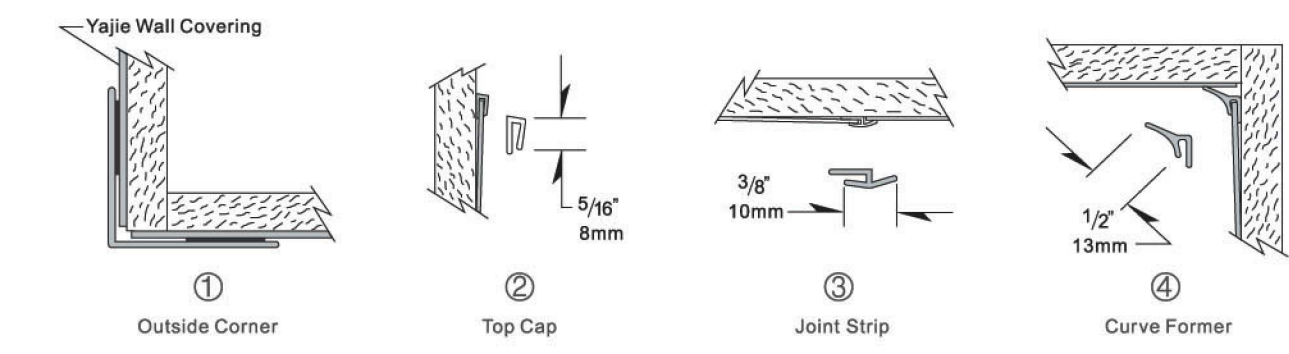

COLOR07

Options

All for you

T2010	T1703	T1	T8805
T1869	T1866	T1812	T1026
T1931	T1932	T1935	T6082
T5	T3	T1833	T1029
T1906	T65	T1605	T143